




# 16" [406 mm] 7 1/2° or 15° BOOT TRANSITION

## Instructions

16" [406] 7 1/2° Boot Transition Kit - Part No. 3-32381

16" [406] 15° Boot Transition Kit - Part No. 3-32382

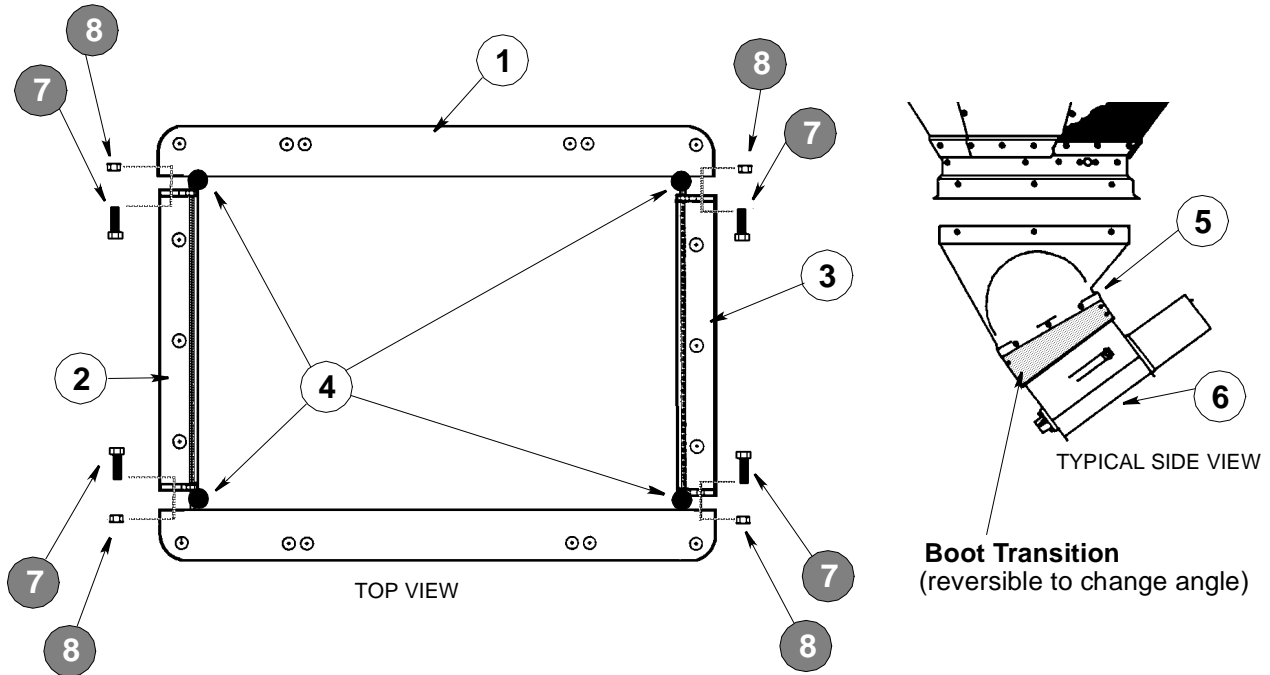

*Metric equivalents are in millimeters and square brackets following the English measurement.*  
Caulking is between the Side Panels and Front and Back of the assembly.  
Caulk only between the bottom of this Transition and the Boot.

Item	Part No.	Description	Qty.
1	3-32244	16" [406] 7 1/2° Boot Transition Side	2 or
	3-32245	16" [406] 15° Boot Transition Side	2
2	3-32246	16" [406] 7 1/2° or 15° Boot Transition Front	1
3	3-32247	16" [406] 7 1/2° Boot Transition Back	1 or
	3-32248	16" [406] 15° Boot Transition Back	1
4	3-12600	Caulking	10' [3 048]
5	-	Transfer Plate	-
6	-	Boot	-
7	39-20002	1/4 x 1/2" Hex Head Gr. 2 Bolt	16
8	39-20019	1/4" Hex Jam Nut	16

All specifications subject to change without notice.

The BROCK® standard One-Year Warranty for Accessory Items applies to this Part.